


Android Quick Start Guide

We continually improve the app and add more features. To get the latest information on setup and features, visit www.neposmart.com/support or scan QR code



Whats in the box?

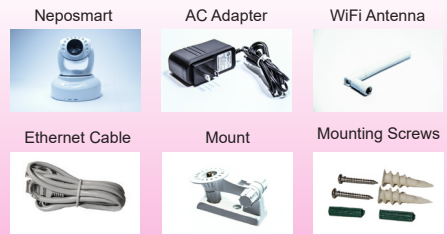

1 Connect

a) Power



b) WiFi Antenna



c) Connect Neposmart using one of the methods below

Method 1 - No Ethernet Cable

a) Locate your router **WPS** button and press for few seconds



b) Press Camera reset button for 5 seconds to connect



c) Restart camera by unplugging power adapter and plug back in to connect to your WiFi network

If the process fails, repeat or connect using method 2

Method 2 - With Ethernet Cable

a) Ethernet cable

 


Note: Ethernet cable is required for setup only. Once you complete step 5 you can unplug the Ethernet cable from your router.

b) Connect other end to your wireless router in any of the four ports




2 Download Neposmart App from the Play Store and Launch





3 Press "Add Device" from main screen

 Make sure your Android is connected to your wireless router




4 Search and add your Neposmart

a) Press "Search Devices"

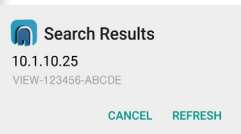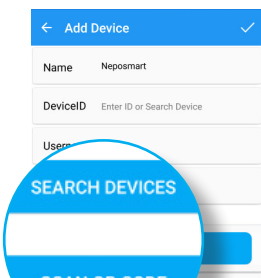

b) Select your device from the Search Results

(Search will display all Neposmart devices within the same WiFi network)

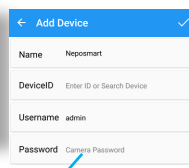


c) Enter default password 123456 and tap


Alternate method: Scan QR code on the bottom of the device or enter known device ID to manually add.

5 Add Device to your Wireless Network

 
Note: If you have connected your Neposmart using the WPS method, it has already been added to your wireless network and you may skip to step 6.




a) Press settings icon next to your device

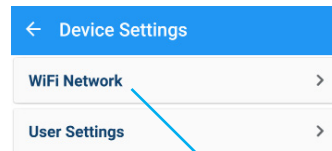

 c) Press "WiFi Network"



b) Press "Device Settings"

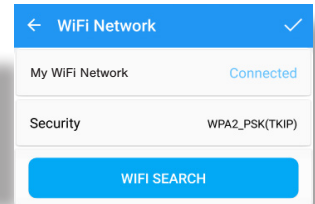


d) Select your WiFi network and enter your WiFi password to complete setup

e) Unplug the Ethernet Cable. Go back to Device List, drag list down to refresh (this make take a moment to reconnect). If not, restart the camera to reconnect to your wireless network.

To ensure that you've entered the correct password for your WiFi router, and that it has successfully connected to your WiFi Network, go back to "Device Settings" > "WiFi Network" and check that the name of your WiFi Network is displayed. If not, repeat step 5.

6 You should now be able to view the video feed of your Neposmart anywhere, anytime!

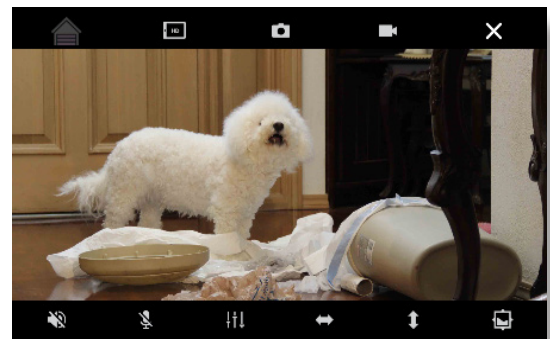


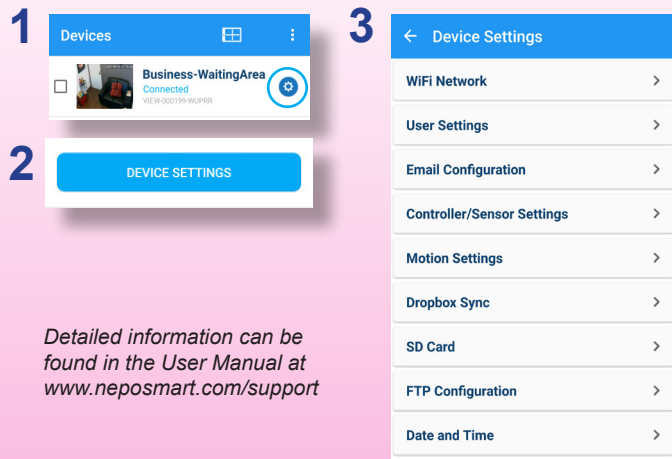
Check that your video image is clear. If not, Slowly adjust the focus ring by rotating clockwise or counter-clockwise until video becomes sharp and clear



The next page shows how to configure your Device Settings

Configuring your Device Settings

Key settings can be found in this screen by pressing  from your "Devices" list > Device Settings





- 1
- 2
- 3

Detailed information can be found in the User Manual at www.neposmart.com/support

Change Default User Settings

Device Settings > User Settings

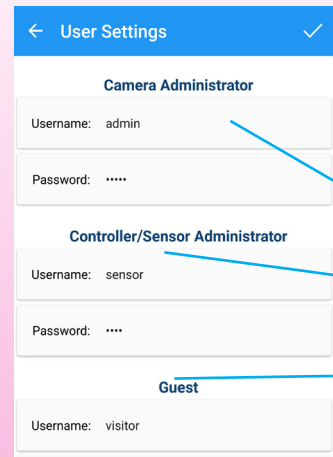

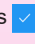
For your own security, change the default username/password. Ensure passwords are difficult for others to guess but something you can remember. Press  when finished

- Enter your own Camera Username and Password
- Enter your own Controller/Sensor Username and Password
- Enter your own Guest Username and Password

Configuring Email Alerts

Device Settings > Email Configuration

Add email addresses to receive Email Notifications

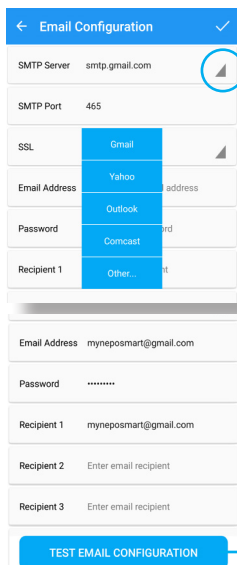

SMTP Server: Select primary email provider from the dropdown. If your email provider isn't listed tap "other", and enter your email provider's Server, SMTP Port and SSL Settings.


Email Address/Password: Enter the primary email and password. This will be the email that will be used to send your Neposmart alerts.

Recipients: Enter up to 3 email recipients. You can also receive text message alerts by entering the SMS email of your wireless carrier. A list of SMS email info for all US carriers can be found at <http://emailtextmessages.com>

Test Email Configuration: Tap to test your email credentials to ensure they are correct.

Sync Images to Dropbox

Device Settings > Dropbox Sync

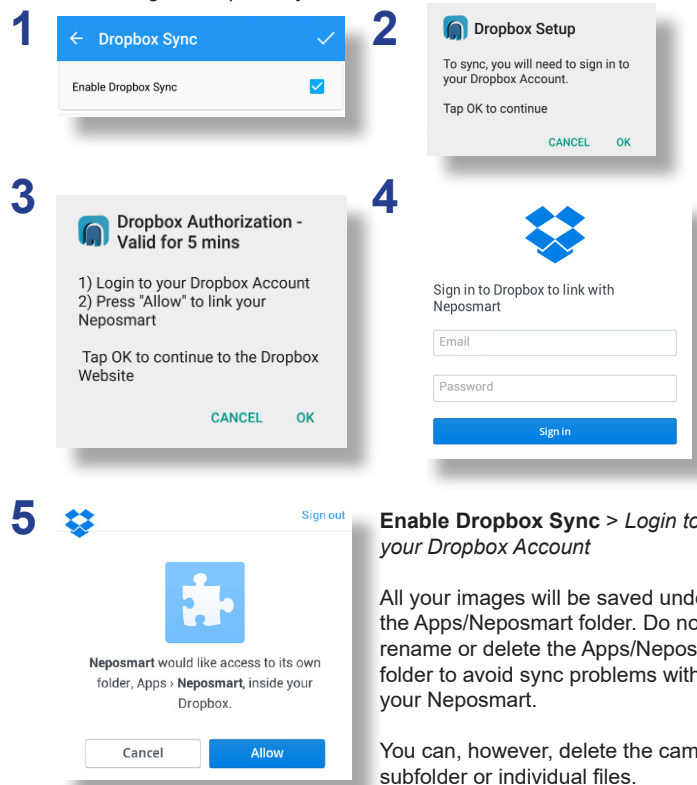

- 1
- 2
- 3
- 4
- 5

Enable Dropbox Sync > Login to your Dropbox Account


All your images will be saved under the Apps/Neposmart folder. Do not rename or delete the Apps/Neposmart folder to avoid sync problems with your Neposmart.

You can, however, delete the camera subfolder or individual files.

Enable Alerts (Motion, Perimeter)

Device Settings > Motion Settings

Device Settings > Controller/Sensor Settings

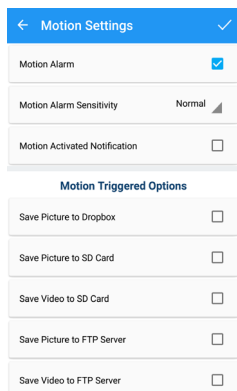

You can receive motion and perimeter breach alerts by enabling respective settings:

- 1 Images synced to Dropbox
- 2 Images/Video saved to built-in SD Card
- 3 Email Notifications
- 4 Images/Video saved to your own FTP Server: Go to FTP configuration and enter your server details

Enable Push Notifications

Receive alerts straight to your Android when sensor triggers

1. Enable Push Notifications
Controller/Sensor Settings > Enable "Sensor Push Notification"

2. Enable Door/Perimeter Detection
Controller/Sensor Settings > Enable "Door/Perimeter Detection"

