

Intelligent Garage Controller Setup

Before you begin: Disconnect your garage from electrical power

Note: This installation guide is intended for garage door switches that use button-only controls. If your garage opener switch has an LCD screen, please refer to the User Guide for instructions.

Warning: Do not install Neposmart if your garage door does not have an electric eye or equivalent safety system that is properly aligned and working

For more information, refer to the User Manual at www.neposmart.com/support

Mount your Device near a power outlet and in good view of your garage, with the mounting kit provided. Use the drywall anchor provided when mounting to drywall.



Unscrew your garage opener switch and take the bell wire (provided) with the spade connectors and screw in the connectors to your garage switch (as shown).

Note: Method show many vary depending on your garage switch brand. Consult your garage manufactuer for more details.





(Example of garage switch - Front)

(Example of garage switch - Back)

Take the other ends of the wire, cut and strip to desired length and push them both into the "OUT" port at the back of the camera



Take the included Magnetic Switches and place on either the side, top, or bottom of your garage door. Mount the **Magnet Side** (non-wired) on your moving garage door, and the **Sensor Side** (wired) no more than 2" away on the fixed part of your door (as shown)

Magnet Side Sensor Side







(Magnetic switches in images are located on the top of garage door)

Run the other end of the wires to your Neposmart Device (secure wire using staples or tape along the ceiling of your garage is ideal) Cut and strip to the desired length. Push both ends into the "IN" port.



(Wires can go in either slot of "IN" port)

Setup completed!

Power on your device and launch the Neposmart App. (Remember to change the default username/password in "Device Settings" > "Door/Garage Settings").

You should be able to open/close your garage door anywhere you see the garage icon (see examples below), Or by using voice command by shaking your mobile device from the Video View Screen.

Android/iOS





Mobile Web Browser App

lcon Indicator:

Door is Closed

Door is Open



