NEPOSMART®
Internet of Things Company

# Outdoor Camera
# iOS Quick Start Guide

*We continually improve the app and add more features. To get the latest information on setup and features, visit www.neposmart.com/support or scan QR code*

## Whats in the box?

Neposmart Outdoor Security Camera

AC Adapter

WiFi Antenna

Mounting Screws

Ethernet Cable

## 1 Connect

a) Power

b) WiFi Antenna

c) Connect Neposmart using one of the methods below

**Method 1** - *No Ethernet Cable*

a) Locate your router **WPS** button and press for few seconds

b) Press Camera Reset/WPS button for 5 seconds to connect

c) Restart the camera by unplugging and replugging the power adapter

*If the process fails, repeat or connect using method 2*

**Method 2** - *With Ethernet Cable*

a) Connect Ethernet cable

*Note: Ethernet cable is required for setup only. Once you complete step 5 you can unplug the Ethernet cable from your router.*

b) Connect other end to your wireless router in any of the four ports

## 2 Download Neposmart App from the App Store and Launch

## 3 Press “Add Device” from main screen

*Make sure your iOS device is connected to your wireless router*

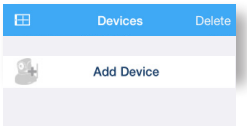


## 4 Search and add your Neposmart

a) Press “Search Devices”

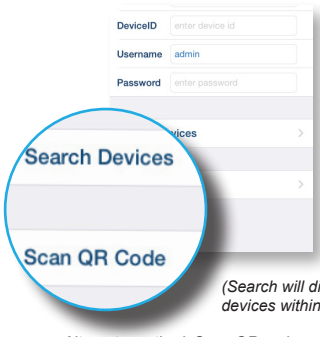


*(Search will display all Neposmart devices within the same WiFi network)*

*Alternate method: Scan QR code on the bottom of the device or enter known device ID to manually add.*

b) Select your device from the Search Results

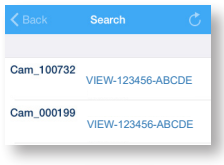


c) Enter default password *123456* and tap “Add”

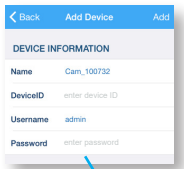


## 5 Add Device to your Wireless Network

*Note: If you have connected your Neposmart using the WPS method, it has already been added to your wireless network and you may skip to step 6.*

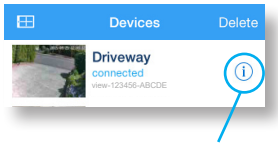


a) Press settings icon next to your device




b) Press “Device Settings”

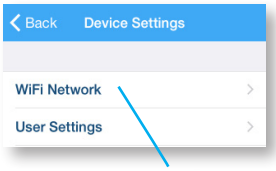


c) Press “WiFi Network”

d) Select your WiFi network and enter your WiFi password to complete setup

e) Unplug the Ethernet Cable. Go back to Device List, drag list down to refresh (this make take a moment to reconnect). If not, restart the camera to reconnect to your wireless network.

*To ensure that you’ve entered the correct password for your WiFi router, and that it has successfully connected to your WiFi Network, go back to “Device Settings” > “WiFi Network” and check that the name of your Wifi Network is displayed. If not, repeat step 5.*

## 6 You should now be able to view the video feed of your Neposmart anywhere, anytime!

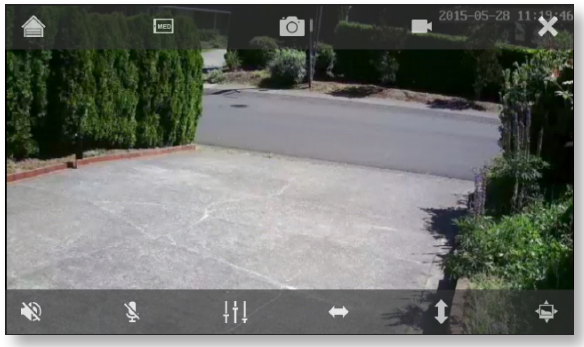

*The next page shows how to configure your Device Settings*

© 2016 Nepoware Corporation. All Rights Reserved

*Complete information can be found in the User Manual at www.neposmart.com/support*

# Configuring your Device Settings

Key settings can be found in this screen by pressing ⓘ from your *"Devices" list > Device Settings*

**1**

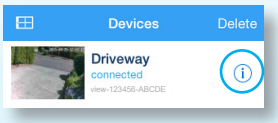


**2**




**3**

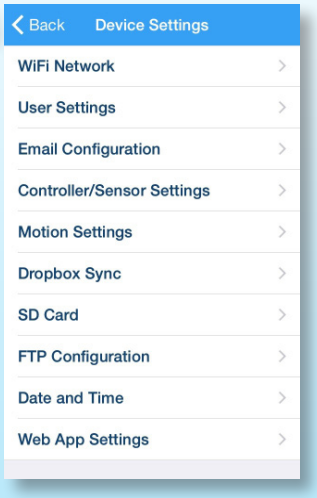


*Detailed information can be found in the User Manual at www.neposmart.com/support*

# Change Default User Settings

*Device Settings > User Settings*

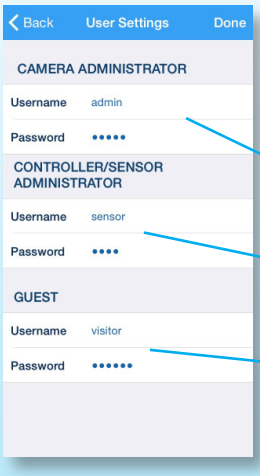


**For your own security**, change the default username/password. Ensure passwords are difficult for others to guess but something you can remember. Press "Done" when finished.

*Enter your own Camera Username and Password*

*Enter your own Controller/Sensor Username and Password*

*Enter your own Guest Username and Password*

# Configuring Email Alerts

*Device Settings > Email Configuration*

Add email addresses to receive Email Notifications

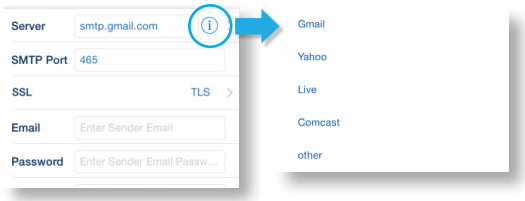


**SMTP Server:** Select your primary email provider from the dropdown. If your email provider isn't listed, tap "other", and enter your email provider's Server, SMTP Port and SSL Settings.

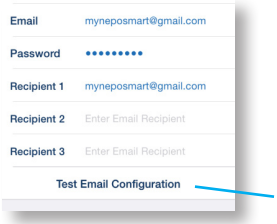


**Email Address/Password:** Enter the primary email and password. This will be the email that will be used to send your Neposmart alerts.

**Recipients:** Enter up to 3 email recipients. You can also receive text message alerts by entering the SMS email of your wireless carrier. A list of SMS email info for all US carriers can be found at http://emailtextmessages.com

**Test Email Configuration:** Tap to test your email credentials to ensure they are correct.

# Sync Video/Images to Dropbox

*Device Settings > Dropbox Sync*

**1**

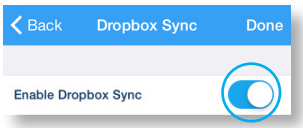


**2**

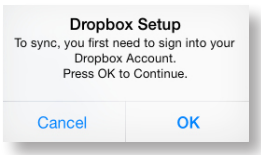


**3**

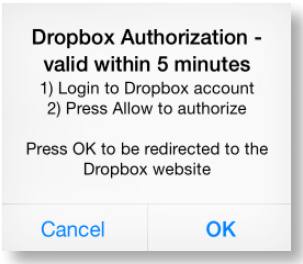


**4**

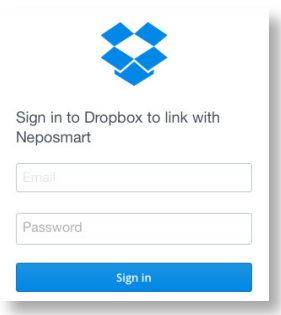


**5**

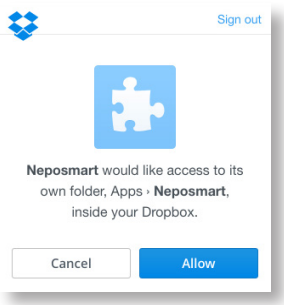


**Enable Dropbox Sync** > *Login to your Dropbox Account*

All your images will be saved under the Apps/Neposmart folder. Do not rename or delete the Apps/Neposmart folder to avoid sync problems with your Neposmart.

You can, however, delete the camera subfolder or individual files.

# Enable Alerts (Motion, Perimeter)

*Device Settings > Motion Settings*

*Device Settings > Controller/Sensor Settings*

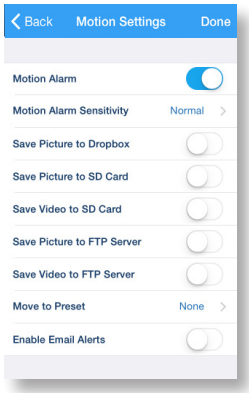


You can receive motion and perimeter breach alerts by enabling respective settings:

1. Images synced to Dropbox
2. Images/Video saved to built-in SD Card
3. Email Notifications
4. Images/Video saved to your own FTP Server: Go to FTP configuration and enter your server details

# Enable Push Notifications

*Receive alerts straight to your iOS when sensor triggers*

**1. Enable Push Notifications**
Controller/Sensor Settings > Enable "Sensor Push Notification"

**2. Enable Door/Perimeter Detection**
Controller/Sensor Settings > Enable "Door/Perimeter Detection"

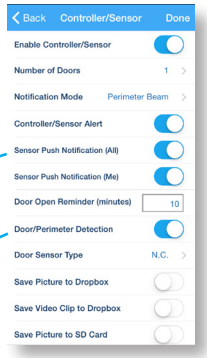


© 2016 Nepoware Corporation. All Rights Reserved

*Complete information can be found in the User Manual at www.neposmart.com/support*